


1

Front edge of worksurface (dashed line)

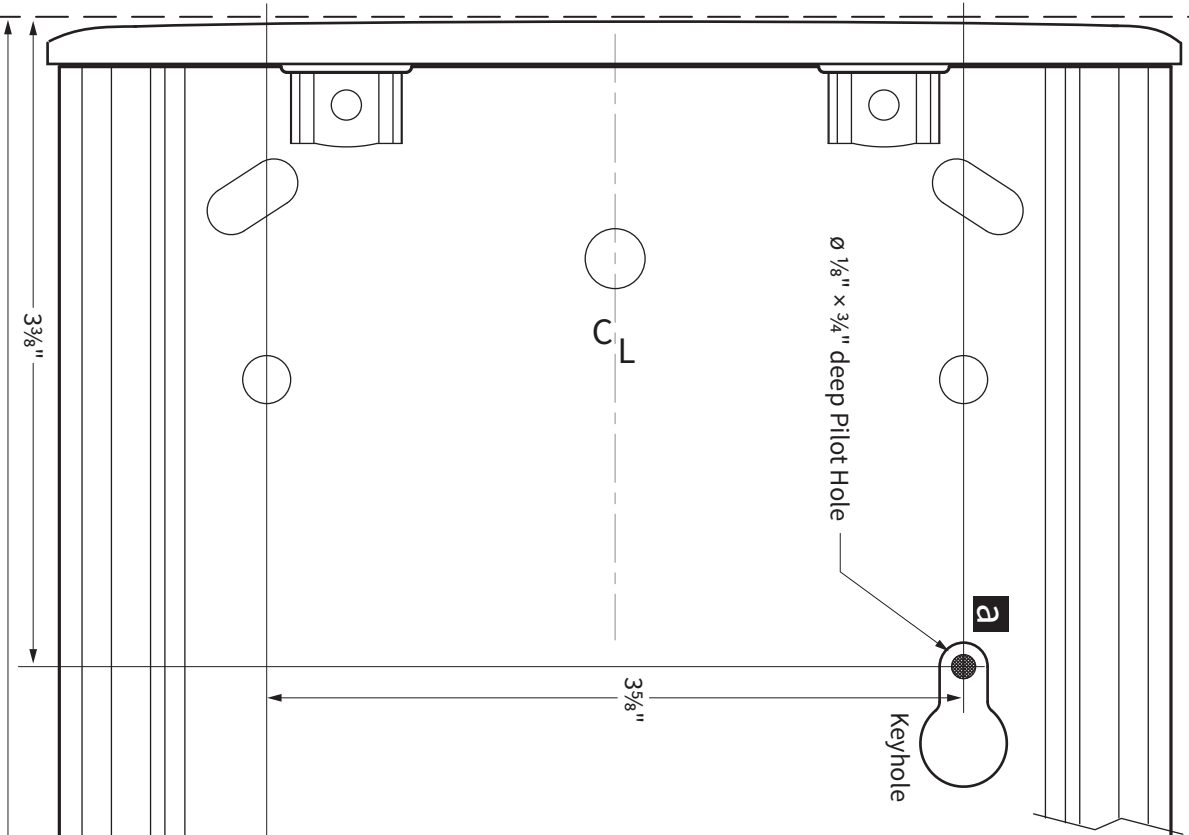

Note: Front edge of track may be recessed up to 2" from front edge of worksurface for increased stowability.



Installation Template: Pinnacle 2

See page 2 for Parts Included and Tools Required for this installation.



CAUTION!
Do not remove arm or front end trim from track for installation.




Note: Make sure this template is printed at 100% scale. Select "None" in Page Scaling menu in printer dialog box.

Workrite ergonomics®

1 Tape Template to Underside of Worksurface

Position template so dashed line runs along front edge of worksurface

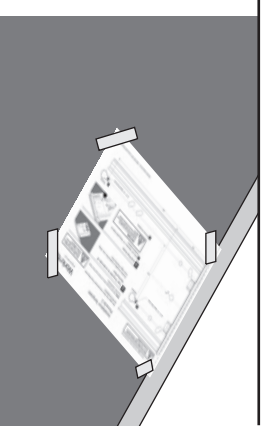


2 Drill Pilot Holes

a Drill 1/8" diameter x 3/4" deep pilot holes at marked locations.




CAUTION!
Do not drill all the way through the worksurface! You may wish to mark your drill bit so you do not drill any further than 3/4".

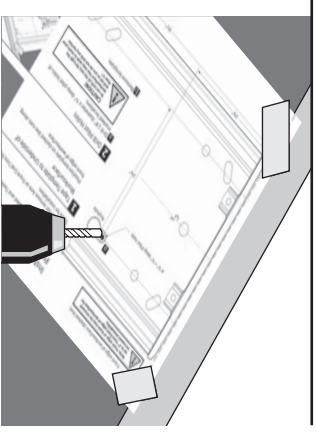

b Remove template.


Continued on other side.

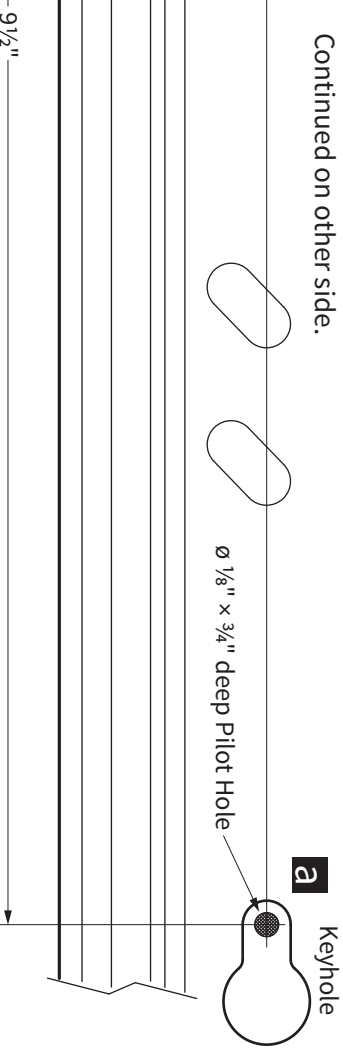


Assembly & Installation Instructions: Pinnacle Arm Mounting

Parts Included

A Pinnacle 2 Arm on Track
Qty: 1

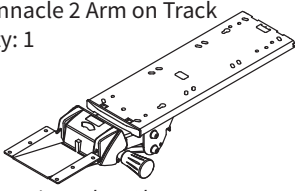


B #12 × 3/4"
Phillips Screws
Qty: 6




Pinnacle 2 Shown


Mounting for the following



Pinnacle 2



Pinnacle 2 Extended

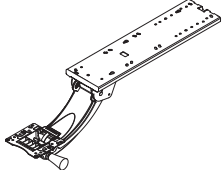

Pinnacle AD

Required

Worksurface
Adjustable Keyboard Platform

Tools Required


#2 Phillips screwdriver or drill/driver
Tape

Continued from other side

 **CAUTION!**
Do not remove arm or front end
trim from track for installation.


3 Install Pilot Screws in Pilot Holes

Install two #12 × 3/4" Wood Screws (B) into Pilot Holes. Leave a gap of approximately 1/8" between the head of the screw and worksurface.

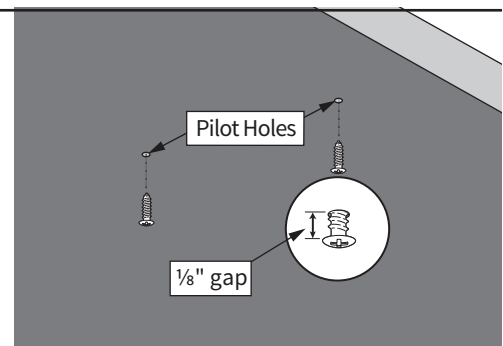


4 Slide Track Keyholes on to Pilot Screws

Slide Track onto Pilot Screws, seating in small end of keyholes.
Tighten screws securely.

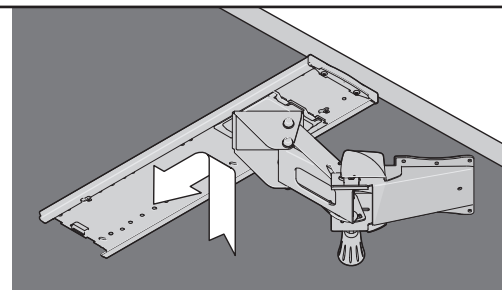

5 Drill Remaining Holes and Install Remaining Screws

Drill 1/8" diameter x 3/4" deep pilot holes at marked locations.

 **CAUTION!**
Do not drill all the way through the worksurface! You may wish to
mark your drill bit so you do not drill any further than 3/4".

Install remaining #12 × 3/4" Wood Screws (B) into Pilot Holes.
Tighten Securely.

